
# User's manual

ΕN

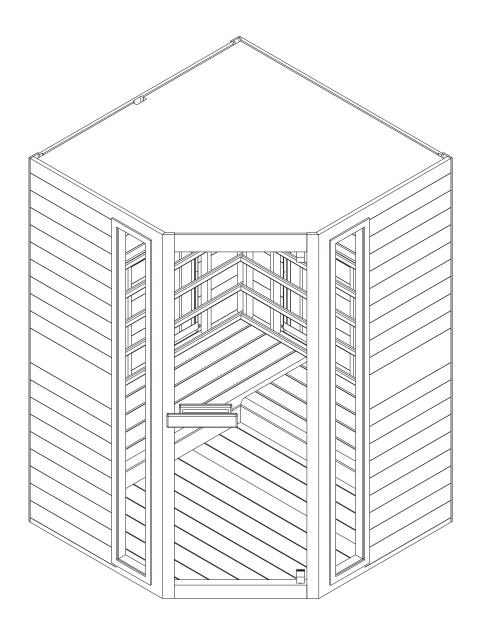

**ADAM** 

#### **PREFACE**

Thank you very much for purchasing our product.

Please read this manual carefully before assembling and save it afterwards. Please write down the control box serial number of the cabin as this number will be required in case of repair or order of spare parts.

#### **ATTENTION**

Installation and repair should only be done by a qualified electrician!

Check power supply rating and make sure the grounded outlet is correctly connected before installation. Use original parts only. Do not share the outlet with any other appliances.

When not in use, turn off the cabin's power unit.

Locate your cabin indoors and on a flat, level and dry surface.

#### **DANGER**

Heaters shall not be subjected to water spray; shower heads shall not be installed within the infrared cabin. Covering the radiator causes a fire hazard due to overheating. Do not cover the heaters!

Keep flammable or easily combustible materials/objects (eg.towels) away from the radiator at all times.

Do not touch the radiator during and shortly after use as a burning hazard exists due to hot parts.

The light bulb heats in use. If the bulb needs to be changed, unplug the cabin and let the bulb cool down before changing it.

Should the electrical connection get damaged, it must be replaced–either by the manufacturer or by a licensed electrician!


#### **WARNING**

If you suffer from illness or other health-related problems, especially heart conditions or circulatory disturbances or if you take medication, you should consult a doctor before using the infrared cabin. Children and frail persons should never be in the cabin without supervision.

If you feel uncomfortable while using the infrared cabin, stop immediately and consult with your doctor. Never go to a hot infrared cabin if you have taken alcohol, strong medicines or narcotics.

#### **Technical data**


Model		IR125C		
Cabin material		Spruce wood		
Length		1265 mm		
Width (depth)		1265 mm		
Height		1900 mm		
Voltage		230volt 50Hz		
Radiators	Туре	G230 tube radiato		
	Total output	2100W 9.2A		
	Back panel	350W x 2		
	Side panel	350W x 2		
	Calves	350W x 2		

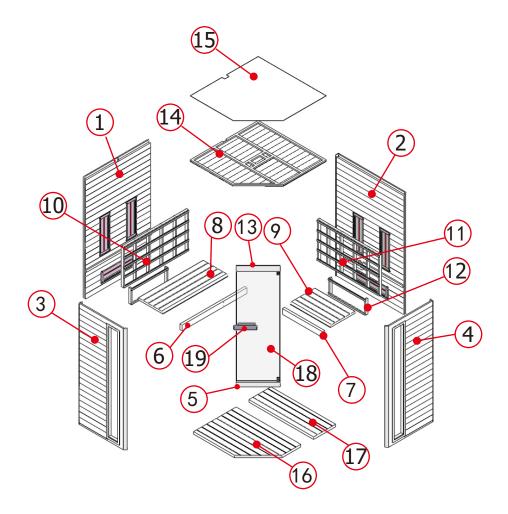

# **Cabin Individual parts (variations possible)**

NO.	Size	Q'TY	NO.	Size	Q'TY
1	1900*1179*43mm	1	10	1177*643*53mm	1
2	1900*1228*43mm	1	11	1124*643*53mm	1
3	1900*841*43mm	1	12	670*250*43mm	2
4	1900*841*43MM	1	13	566*90*40mm	1
5	561*70*40mm	1	14	1233*1233*28mm	1
6	1177*90*40mm	1	15	1233*1233*3mm	1
7	732*90*40mm	1	16	1173*773*40mm	1
8	1177*450*33mm	1	17	1173*400*40mm	1
9	727*450*33mm	1	18	1726*557*6mm	2
			19	180*40*45mm	1

# **Hardware parts (variations possible)**

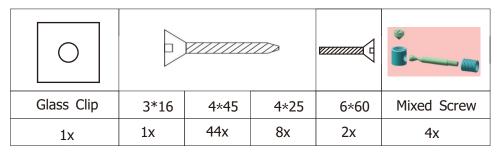

#### ASSEMBLE INSTRUCTIONS

#### **Assemble tips**


Please remove transport packaging and inspect that your infrared cabin has been delivered complete and intact before beginning assemble.

A least 2 persons are required for assemble of the cabin.

Please check the countersink and hole diameter of the drill holes to avoid damaging the wood.


The minimum room height required for installation is 2020mm

#### **Tools**

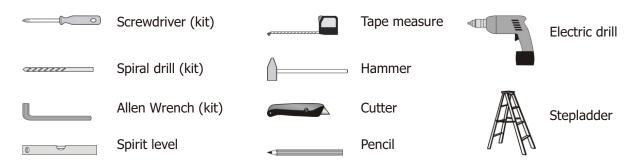


# **ASSEMBLE INSTRUCTIONS**

# Assemble steps

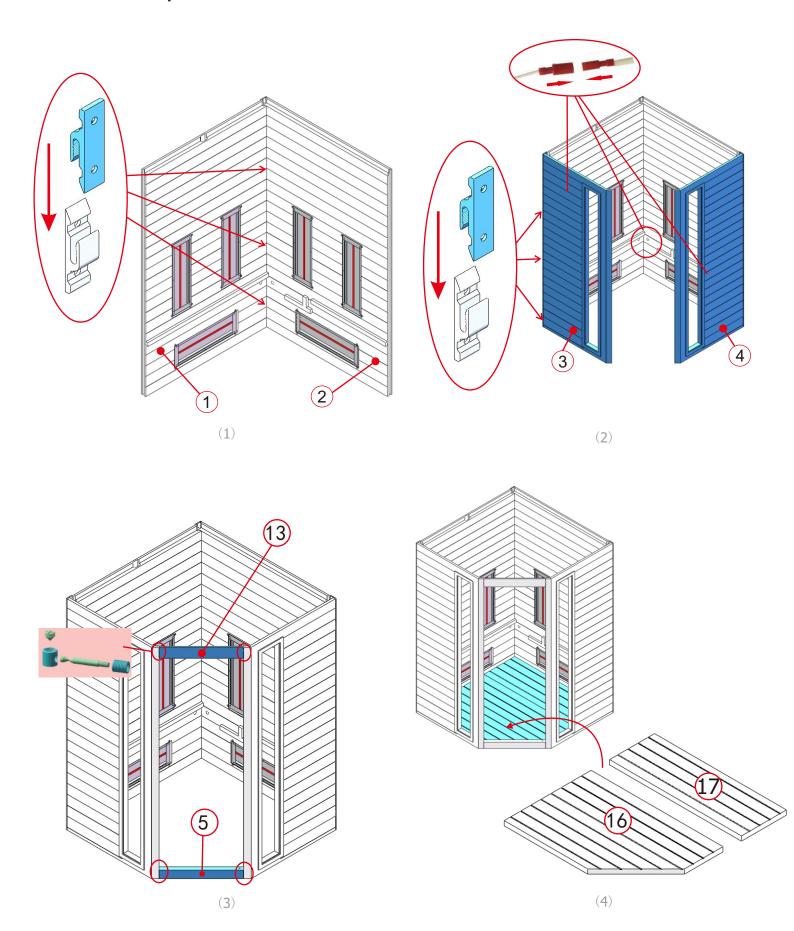

#### ASSEMBLE INSTRUCTIONS

# **Assemble steps**

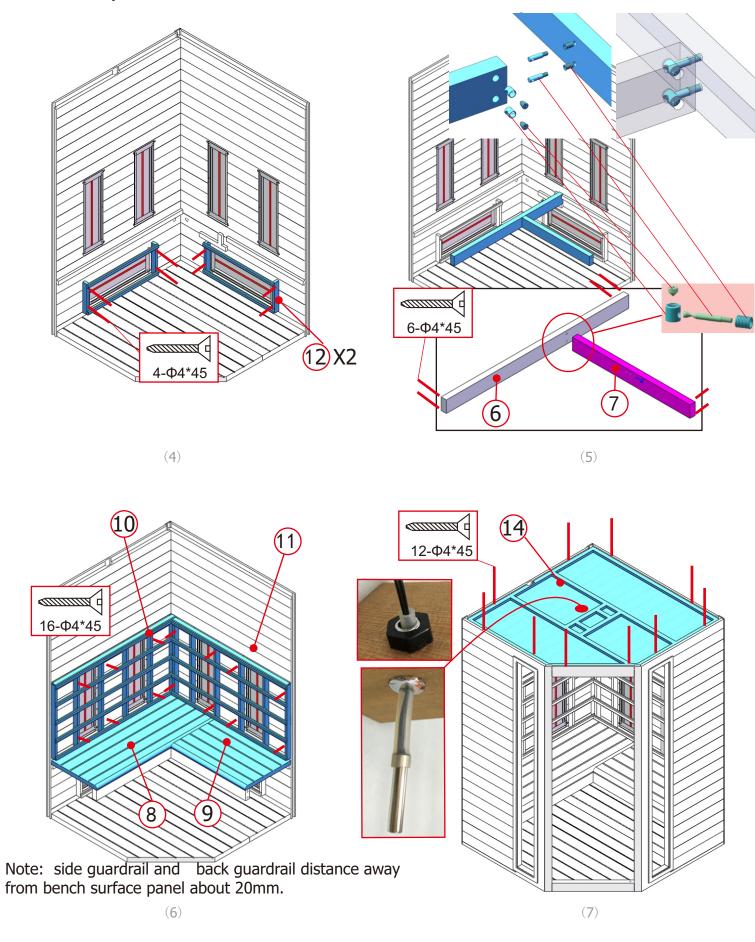


#### **ASSEMBLE INSTRUCTIONS**


⊐ Handle ⇒Glass door ⊐ Handle

₩ood cover 2-Φ6\*60

# **Assemble steps**

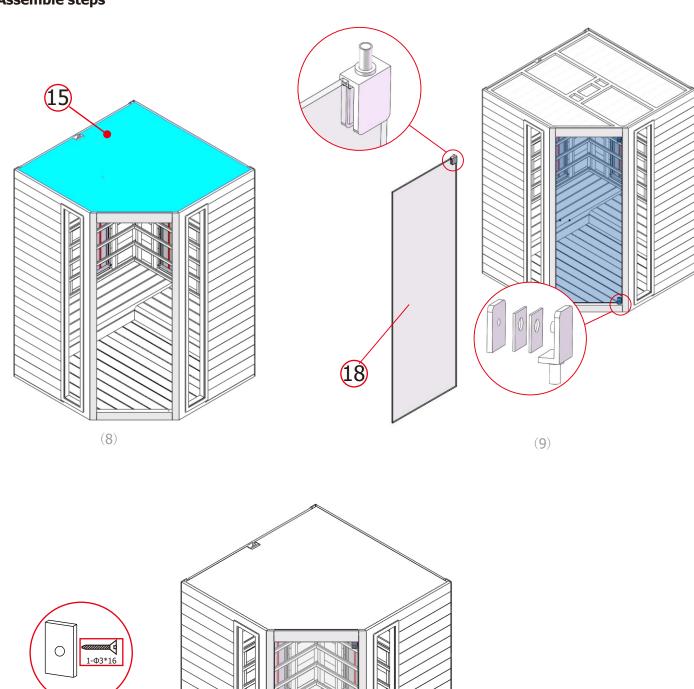

 $\begin{picture}(10) \label{eq:connect} \begin{picture}(0,0) \label{eq:connect} \begi$ 

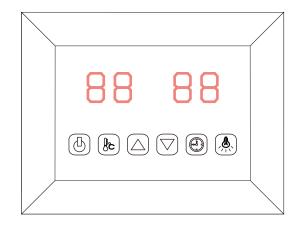

- (b) ON/OFF
- Color light
- ( Temperature setting
- Time setting
- ∇ Time/Temperature-

Connect the power unit to wall outlet, the LED indicator will start to blink on the display. Now it is possible to switch on the infrared heaters, the light and the music function.

### 1)Startup

Press (b) to switch on the display and heaters start to work, the length of time is automatically set to 99 minutes and the air temperature inside the cabin will be presented. Press (b) again could switch off the heaters.

# 2)Temperature settings

The left display refers to the air temperature. Press &, you can set the desired temperature from 35 to 60 by pressing the  $\bigcirc$  / $\bigcirc$  keys, Interval=1 ; The setting number blinks 10 seconds then automatically presents the air temperature; When at this temperature, the heaters will stop working automatically; When it fall 4 below this temperature, the cabin will start up automatically.

Please note: The maximum air temperature reachable in the cabin may be lower than the desired temperature. This is dependent on the temperature outside the cabin. Default temperature=40


# 3)Time settings

The right display refers to the length of time. Press 6, you can set the desired time from 5mins to 99mins by pressing the 6 /7 keys: Interval=1mins; When count down to 00, the heaters will shut off automatically. Default time=99minutes.


# 4) Color light

Short press (4), you can set the desired color (7 color totally) and close the light; Long press (4) to go into an automatically cycling mode, changing 7 colors every 5 seconds.

#### 5) MP3

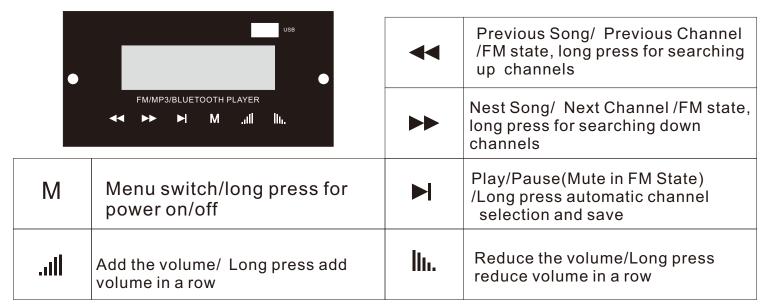

CIRCUIT DIAGRAM

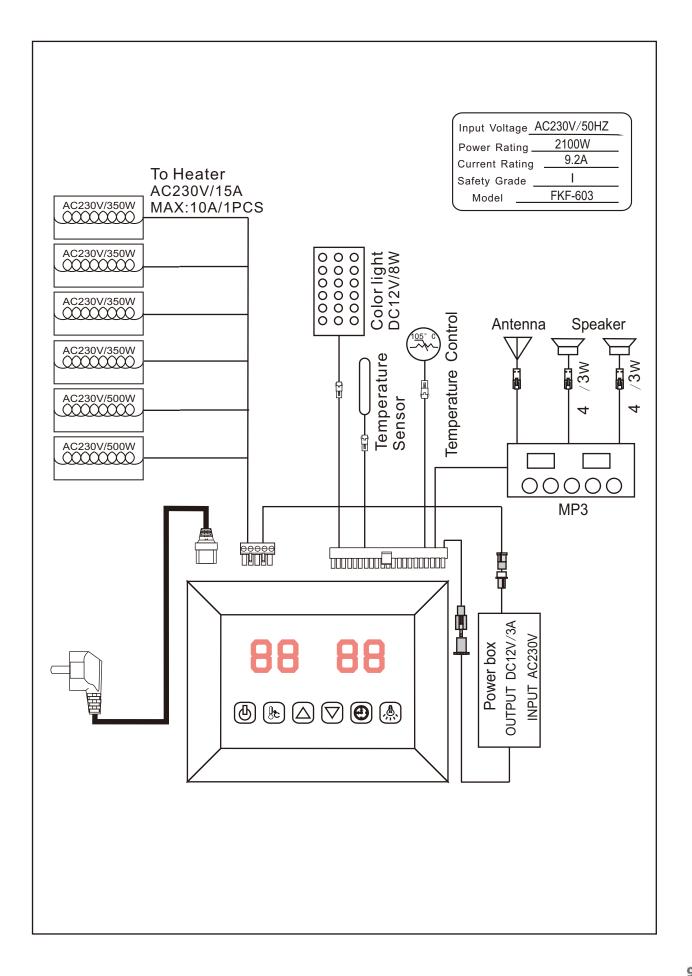

#### **SERVICE**

#### **Use instructions**

Drink plenty of liquids before and after use of the infrared cabin.

Dry yourself off completely.

The optimal cabin temperature for a pleasant session lies between 35 and 40 .

After a heating period of an hour at the latest, the cabin should be switched off and a heating brake of at least 30 minutes should be taken.

It is recommended to take a warm shower and relax after use.

#### **Maintenance instructions**

Clean the cabin with a damp cotton towel, dry with a clean dry towel.

Clean the glass with a window/glass cleaner and a soft cloth.

Do not pour water in the control panel or clean it with wet cloth. For cleaning purposes, use a cleaning cloth that has been only slightly moistened with a mild soapy solvent (dish detergent).

Do not use chemical detergents to clean the cabin.

Please fasten the screws of the bench once every three months, avoid the loose or drop off.

Notes:		